



G00184201

Fig. 18: Removing & Installing Audio Unit (Except High Output Amplifier & Subwoofer)
Courtesy of FORD MOTOR CO.

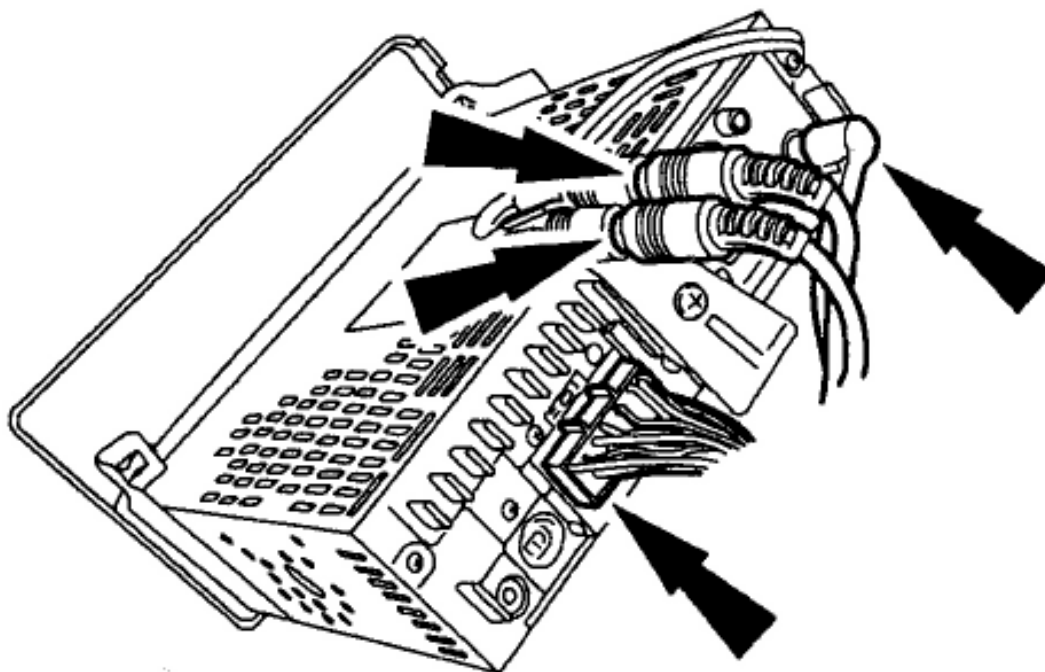


G00184202

Fig. 19: Identifying Audio Unit Connectors (Except High Output Amplifier & Subwoofer)
Courtesy of FORD MOTOR CO.

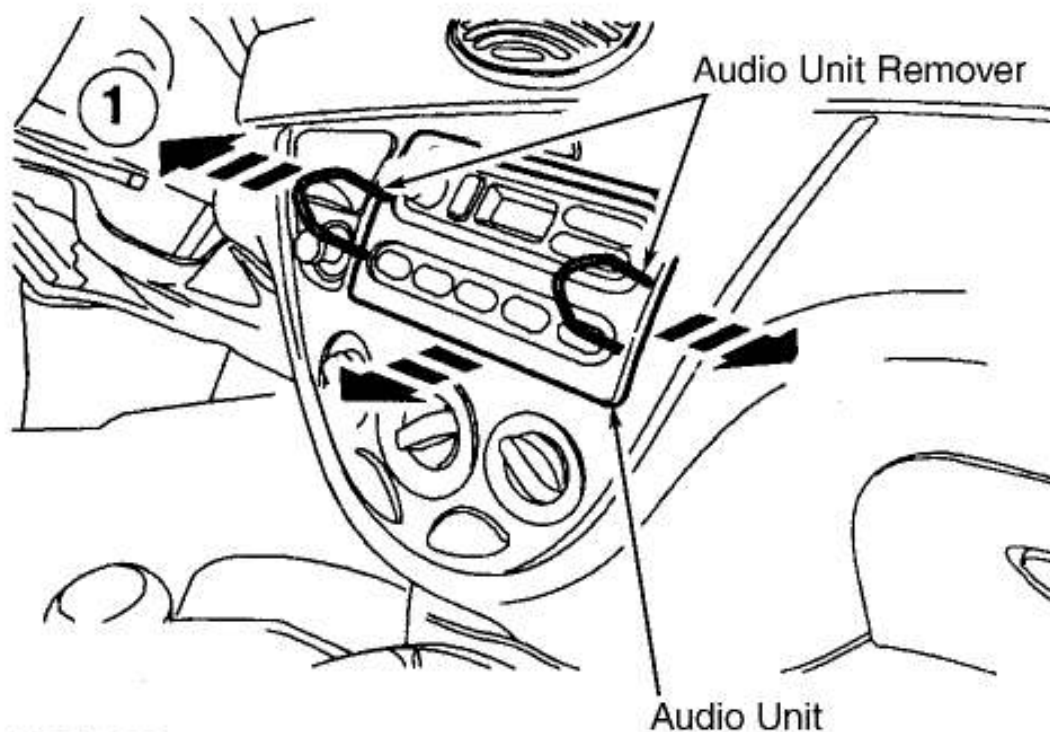


G00184203

Fig. 20: Removing & Installing Audio Unit (High Output Amplifier & Subwoofer)
Courtesy of FORD MOTOR CO.

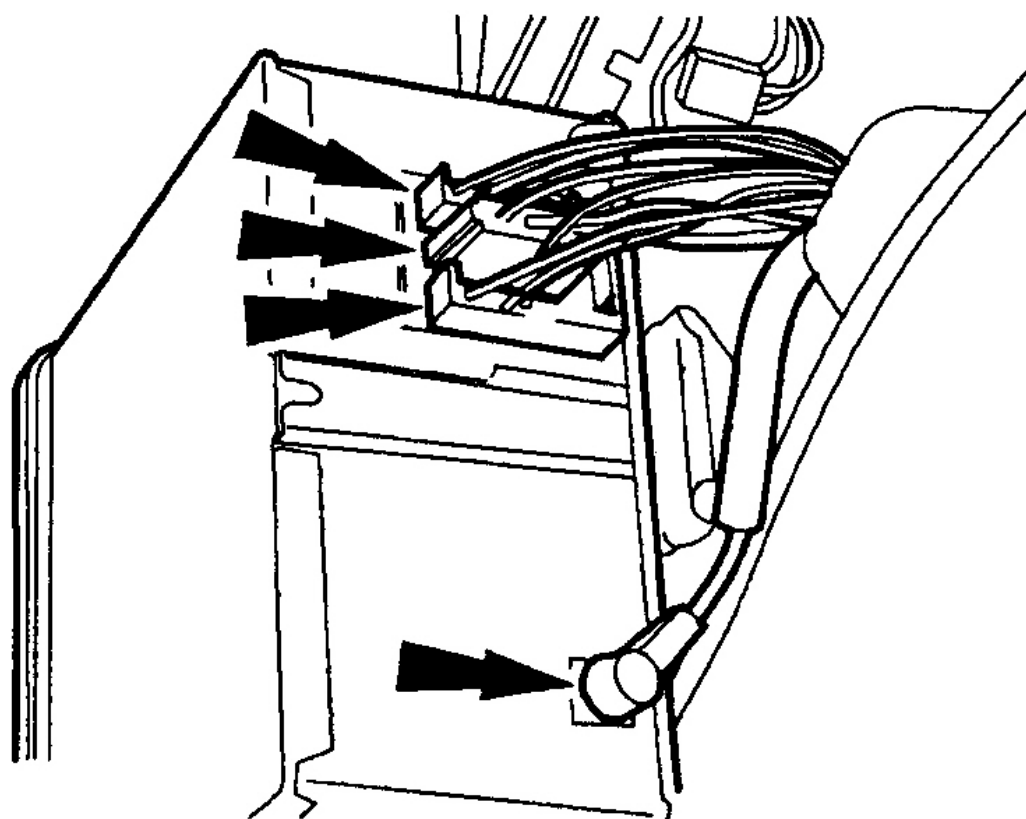


G00184204

Fig. 21: Identifying Audio Unit Connectors (High Output Amplifier & Subwoofer)
Courtesy of FORD MOTOR CO.

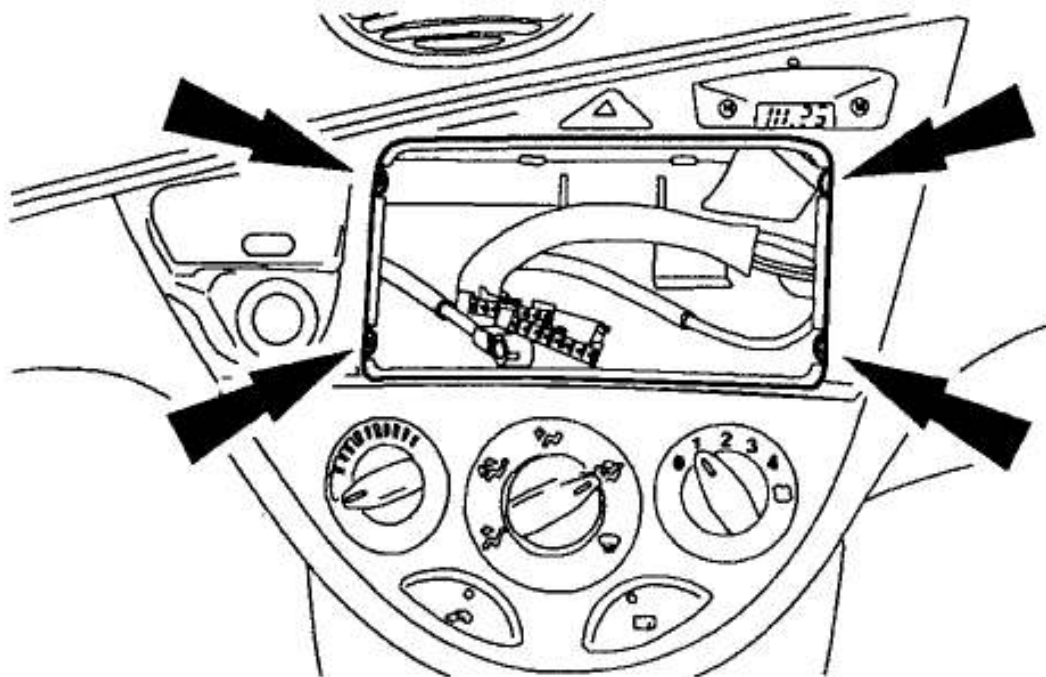


G00184205

Fig. 22: Identifying Instrument Panel Console Bezel Retaining Screws
Courtesy of FORD MOTOR CO.

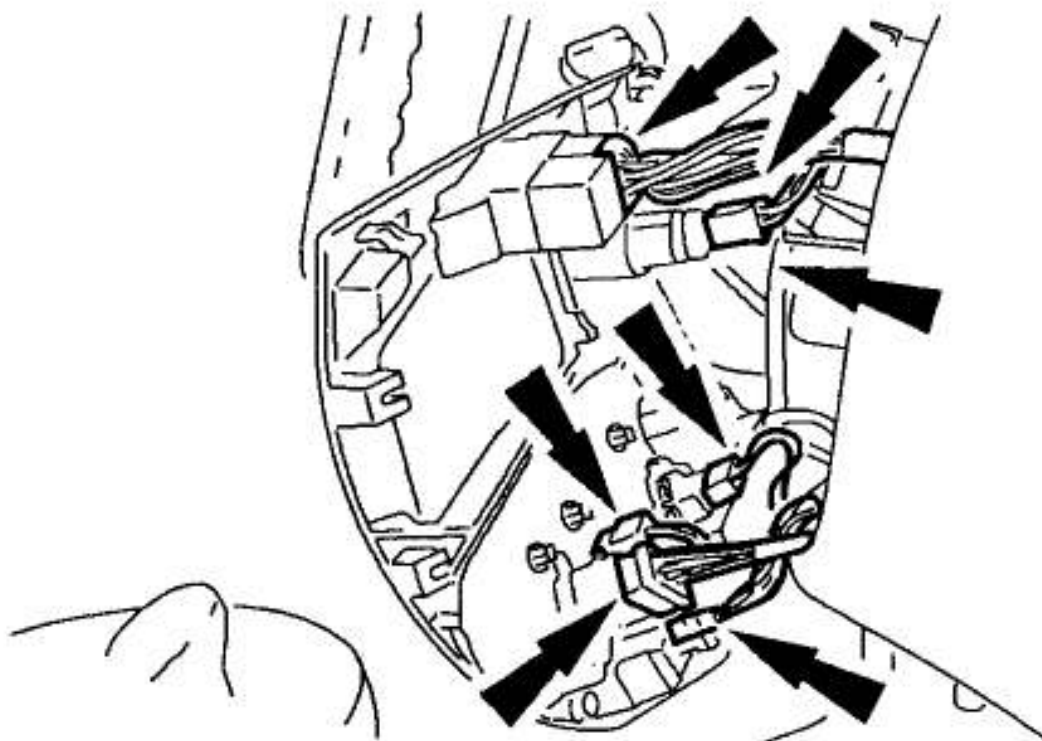


G00184206

Fig. 23: Identifying Instrument Panel Console Bezel Connectors
Courtesy of FORD MOTOR CO.

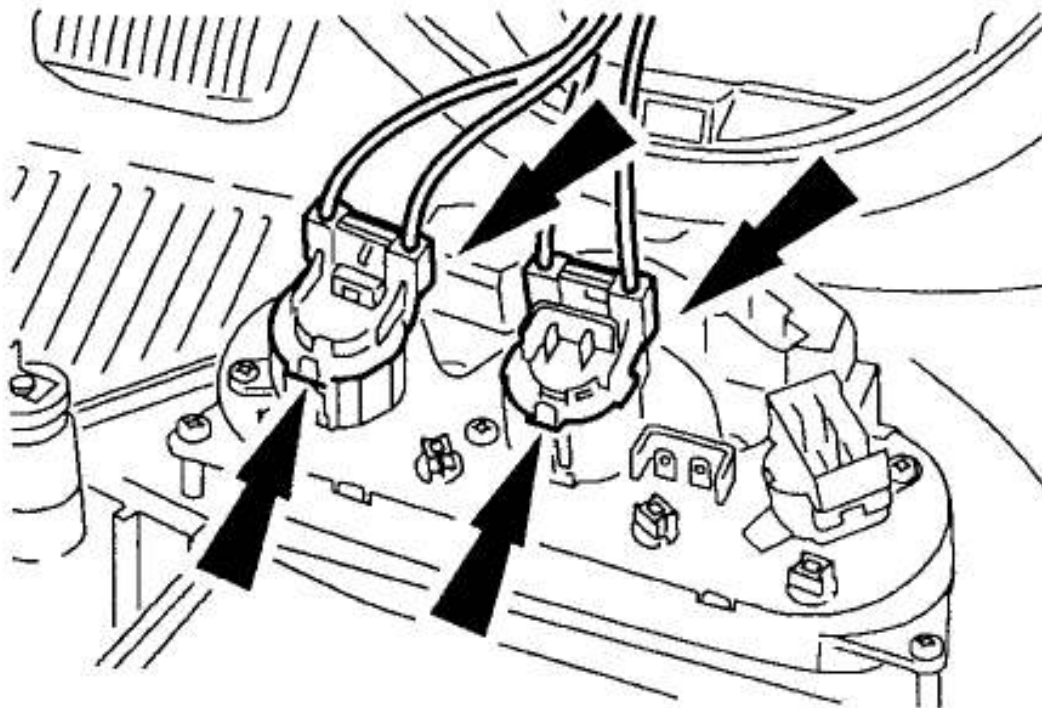

G00184207

Fig. 24: Identifying Temperature & Air Distribution Cables
Courtesy of FORD MOTOR CO.

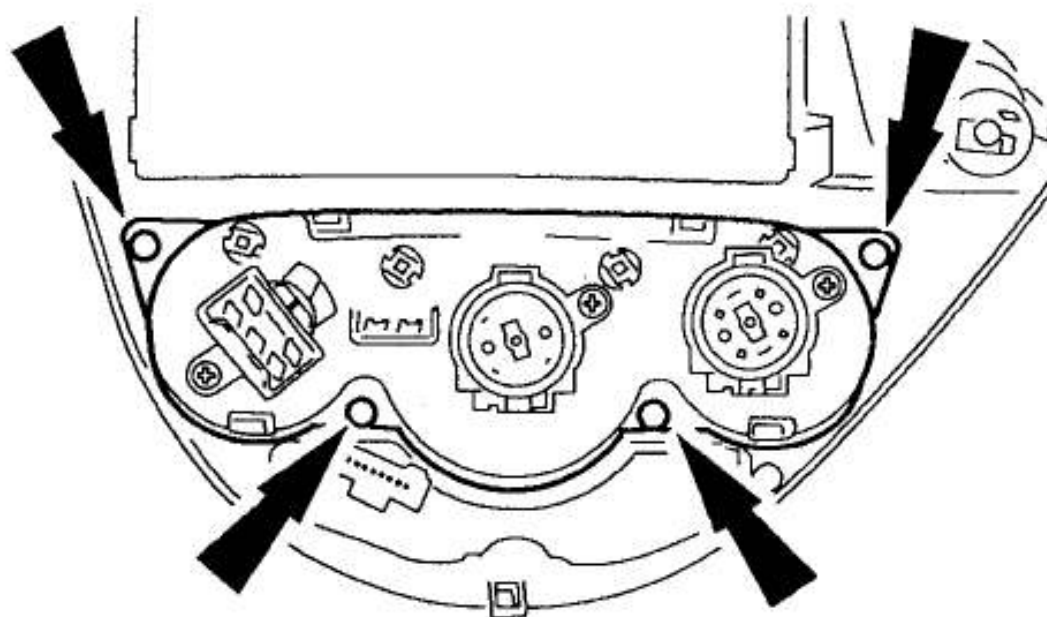


G00184208

Fig. 25: Removing & Installing Control Panel Assembly
Courtesy of FORD MOTOR CO.

FLOOR CONSOLE


Removal & Installation (A/T)

1. Move automatic transaxle selector lever to "N" position. Remove cup holder. Remove floor console front retaining screw on each side. See **Fig. 26**.
2. On vehicles with traction control, detach retaining clips and detach automatic transaxle selector lever trim panel from floor console. See **Fig. 27**. Remove automatic transaxle selector lever trim panel. Disconnect traction control electrical connector. See **Fig. 28**.
3. On vehicles with center armrest, detach rear of floor console from floor panel bracket. See **Fig. 29**. Remove armrest trim panel. See **Fig. 30**. Remove retaining screws and armrest.
4. On vehicles without center armrest, remove insert from rear of floor console. See **Fig. 31**. Remove floor console rear retaining nuts.
5. On all vehicles, fully raise parking brake lever and detach boot. See **Fig. 32**. Move automatic transaxle selector lever to "P" position. Remove floor console. See **Fig. 33**.
6. To install, reverse removal procedure.

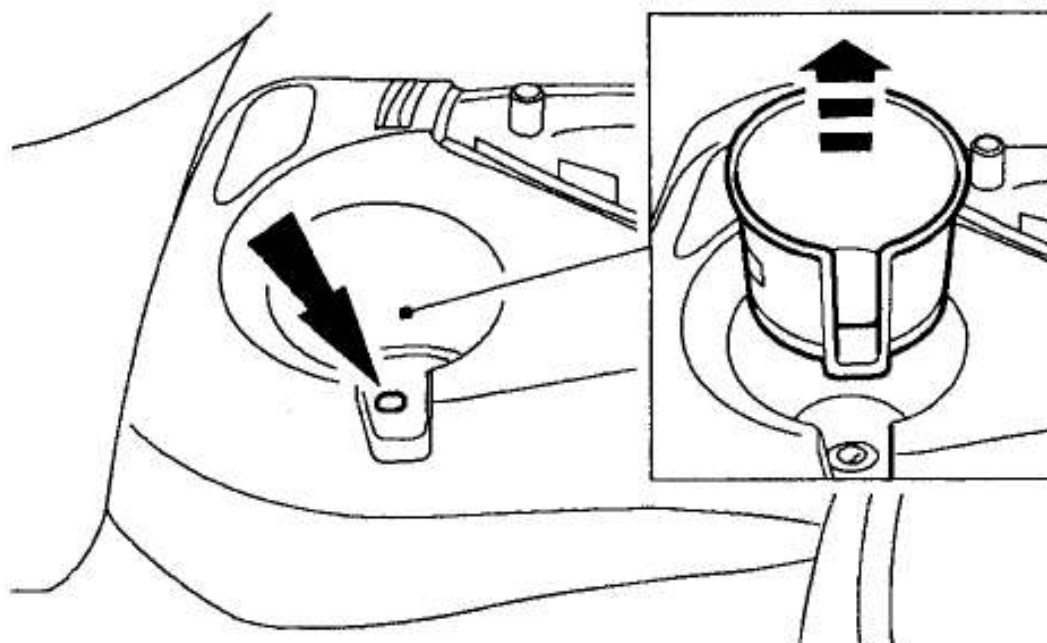


G00184169

Fig. 26: Removing & Installing Floor Console Front Retaining Screws
Courtesy of FORD MOTOR CO.

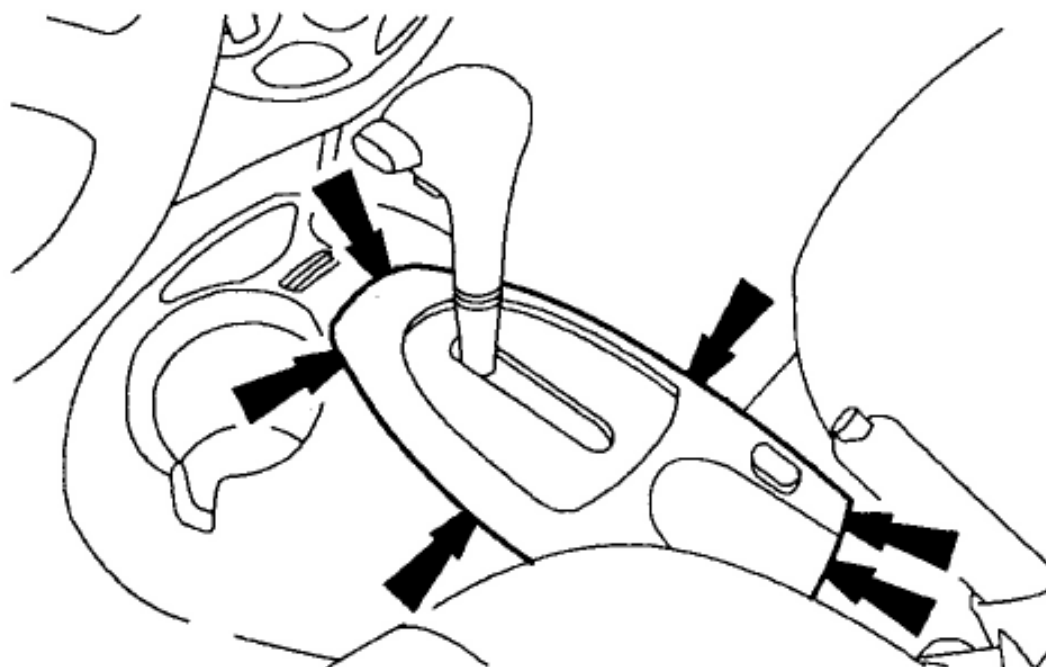

G00184170

Fig. 27: Identifying Automatic Transaxle Lever Trim Panel Retaining Clips Location
Courtesy of FORD MOTOR CO.

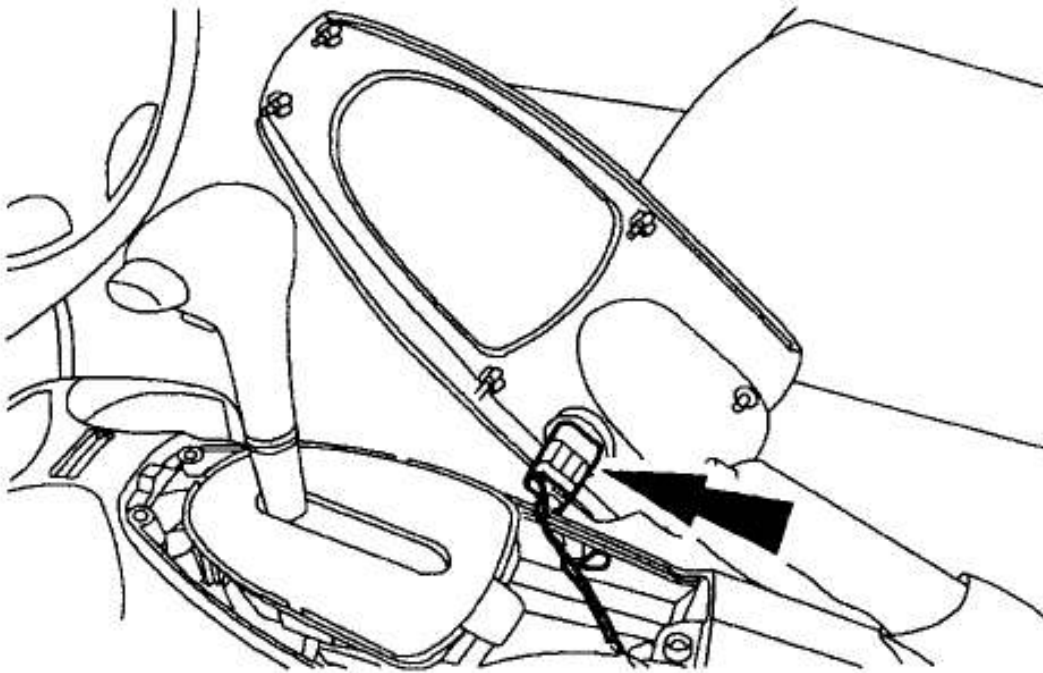

G00184171

Fig. 28: Identifying Traction Control Connector (A/T)
Courtesy of FORD MOTOR CO.