


G00184172

Fig. 29: Removing & Installing Rear Of Floor Console
Courtesy of FORD MOTOR CO.

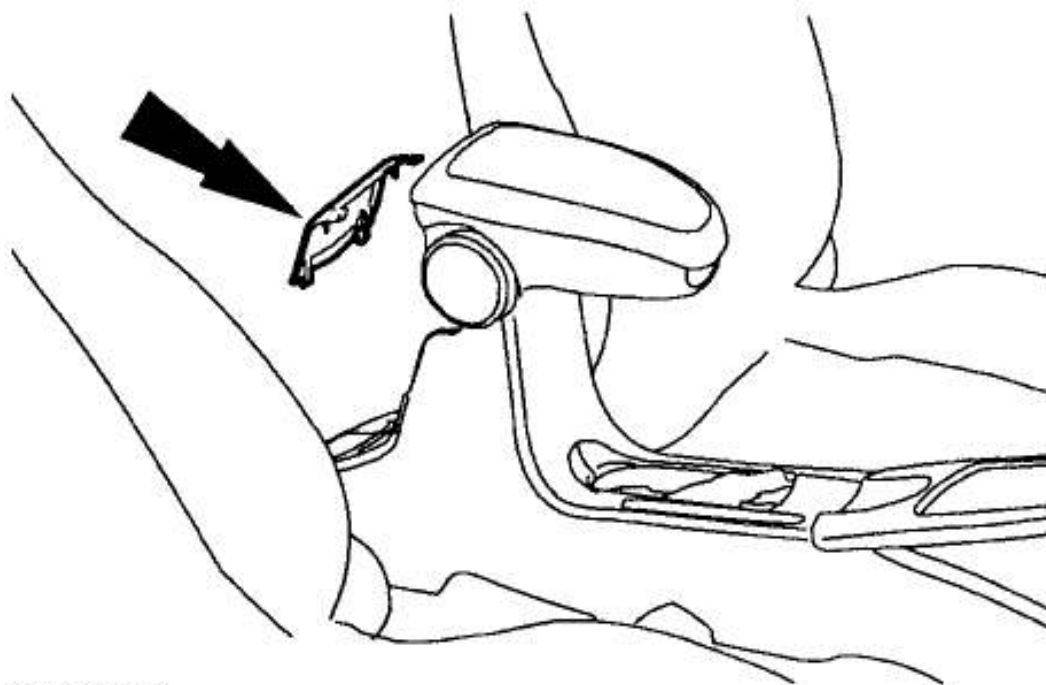

G00184173

Fig. 30: Removing & Installing Armrest Trim Panel
Courtesy of FORD MOTOR CO.



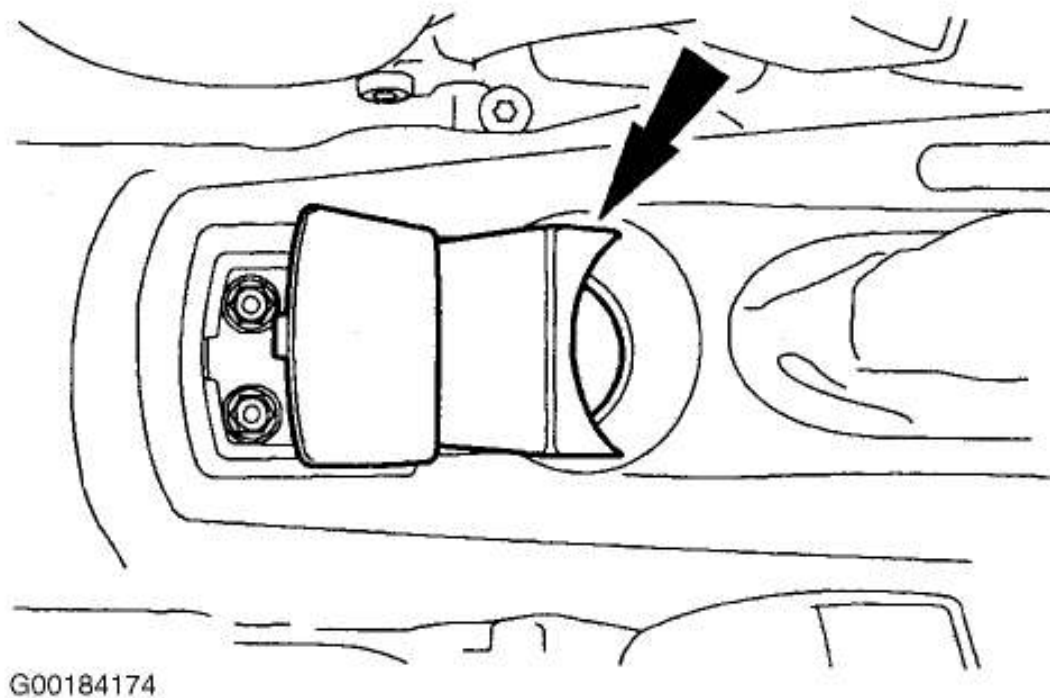


Fig. 31: Removing & Installing Rear Floor Console Insert
Courtesy of FORD MOTOR CO.

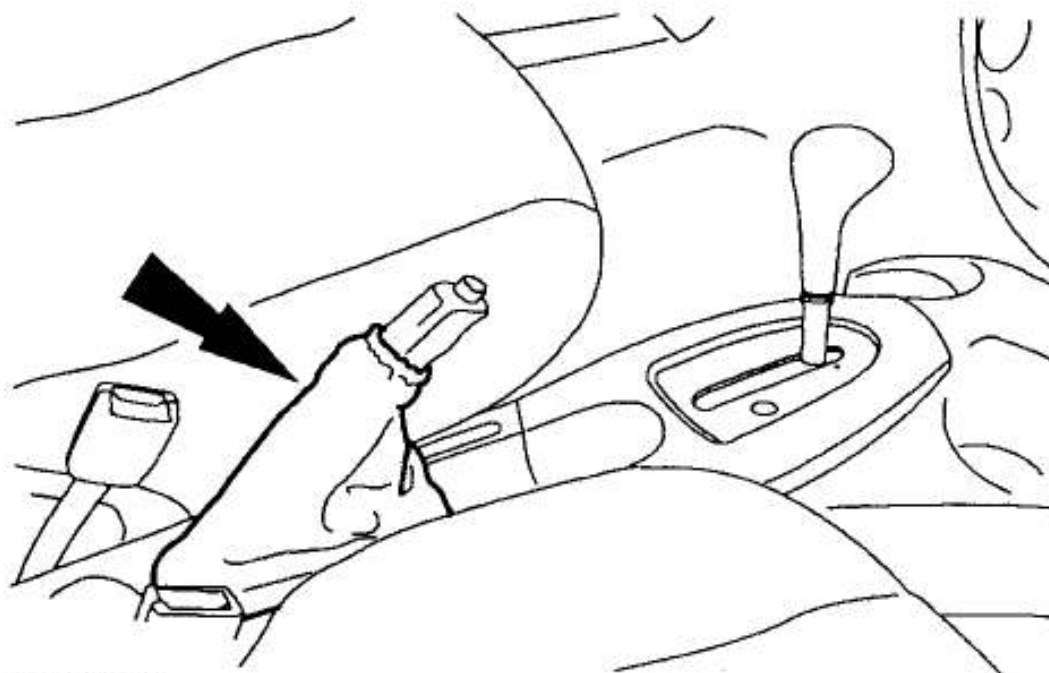

G00184175

Fig. 32: Removing & Installing Parking Brake Lever Boot (A/T)
Courtesy of FORD MOTOR CO.

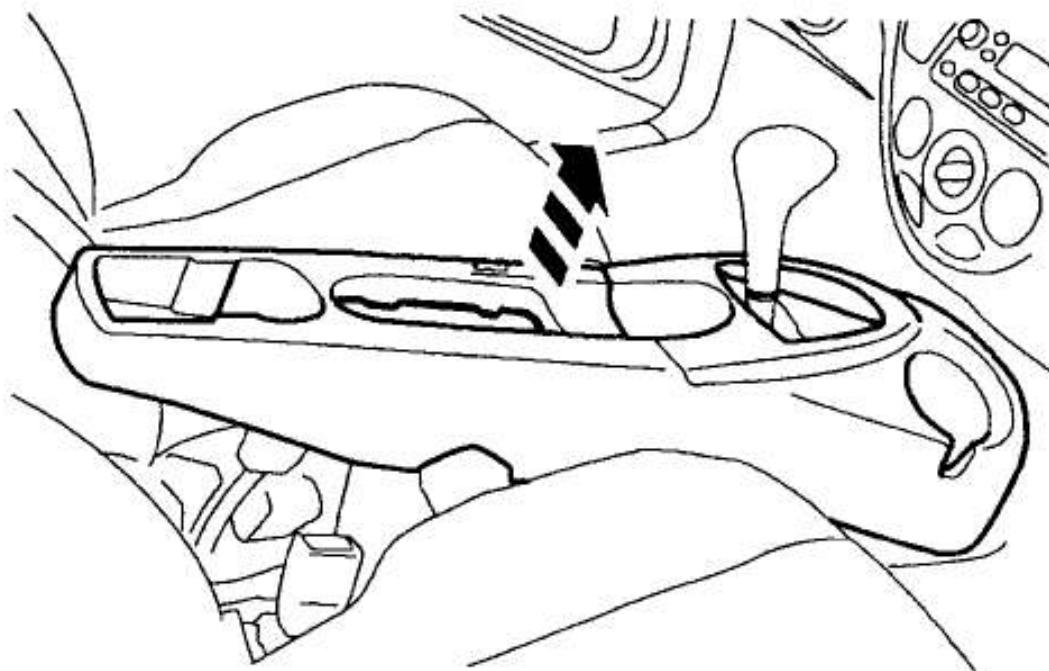


G00184176

Fig. 33: Removing & Installing Floor Console (A/T)
Courtesy of FORD MOTOR CO.


Removal & Installation (M/T)

1. Remove cup holder. Remove floor console front retaining screw on each side. See **Fig. 26** . Detach gearshift lever boot from floor console.
2. On vehicles with traction control, detach retaining clips and detach manual transaxle gearshift lever trim panel from floor console. See **Fig. 34** . Remove manual transaxle selector lever trim panel. Disconnect traction control electrical connector. See **Fig. 35** .
3. On vehicles with center armrest, detach rear of floor console from floor panel bracket. See **Fig. 29** . Remove armrest trim panel. See **Fig. 30** . Remove retaining screws and armrest.
4. On vehicles without center armrest, remove insert from rear of floor console. See **Fig. 31** . Remove floor console rear retaining nuts.
5. On all vehicles, fully raise parking brake lever and detach boot. See **Fig. 36** . Remove floor console. See **Fig. 37** .
6. To install, reverse removal procedure.

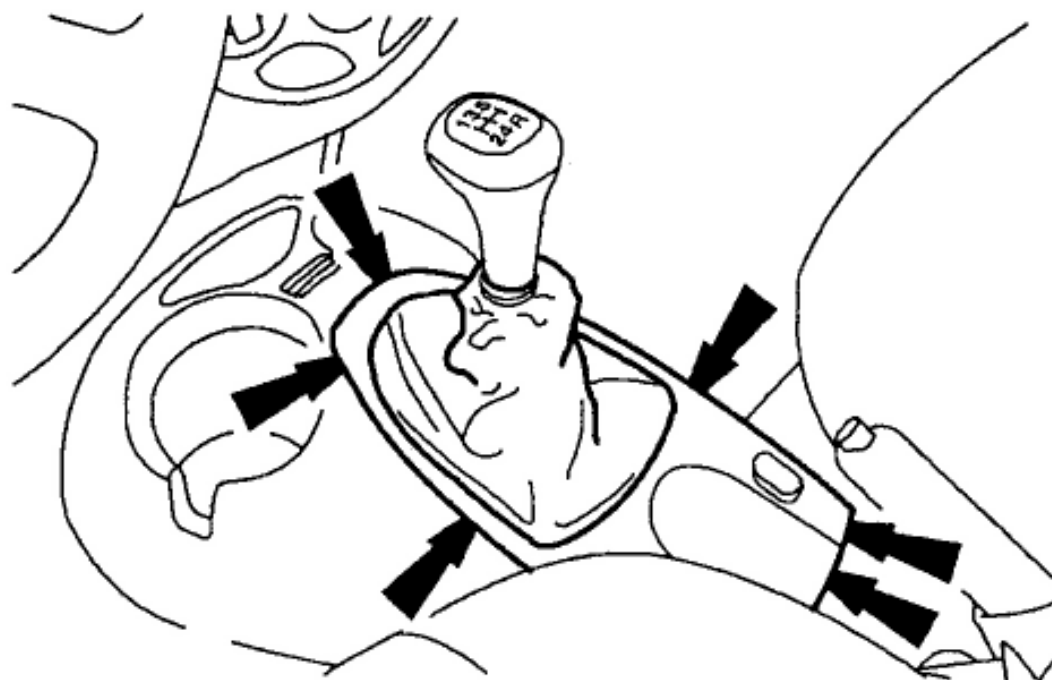


G00184177

Fig. 34: Identifying Manual Transaxle Lever Trim Panel Retaining Clips Location
Courtesy of FORD MOTOR CO.

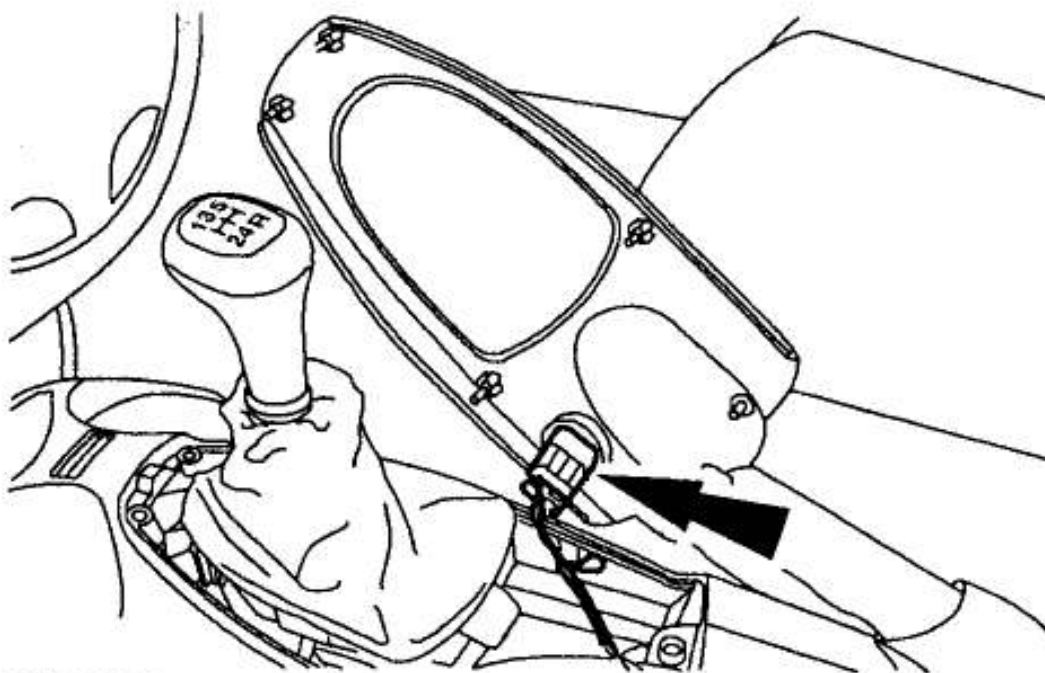

G00184178

Fig. 35: Identifying Traction Control Connector (M/T)
Courtesy of FORD MOTOR CO.

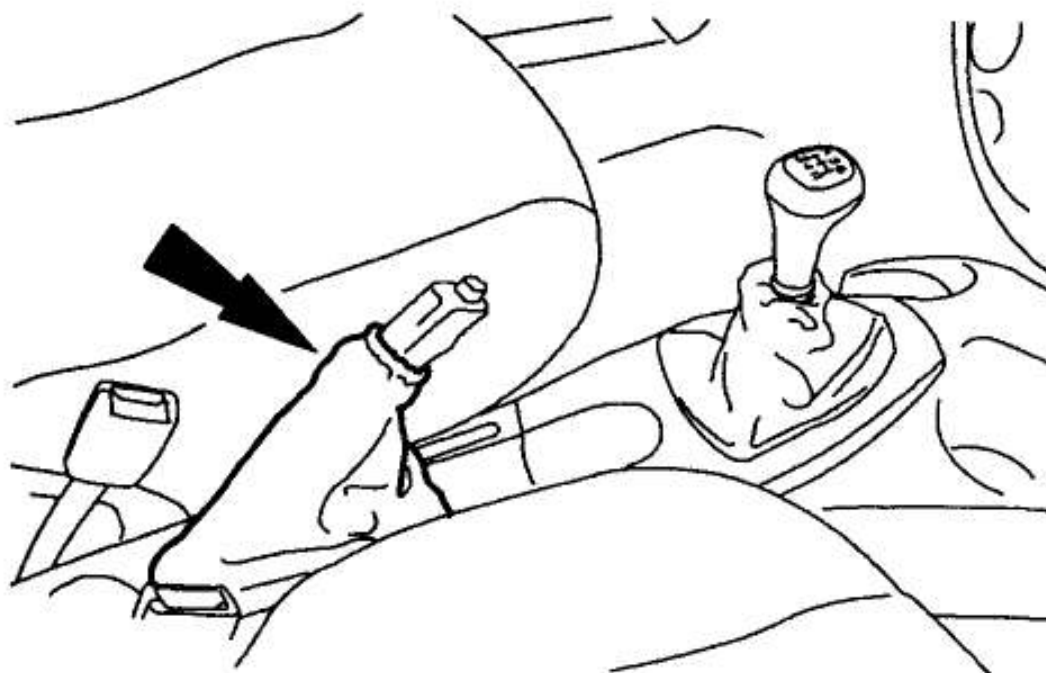

G00184179

Fig. 36: Removing & Installing Parking Brake Lever Boot (M/T)
Courtesy of FORD MOTOR CO.

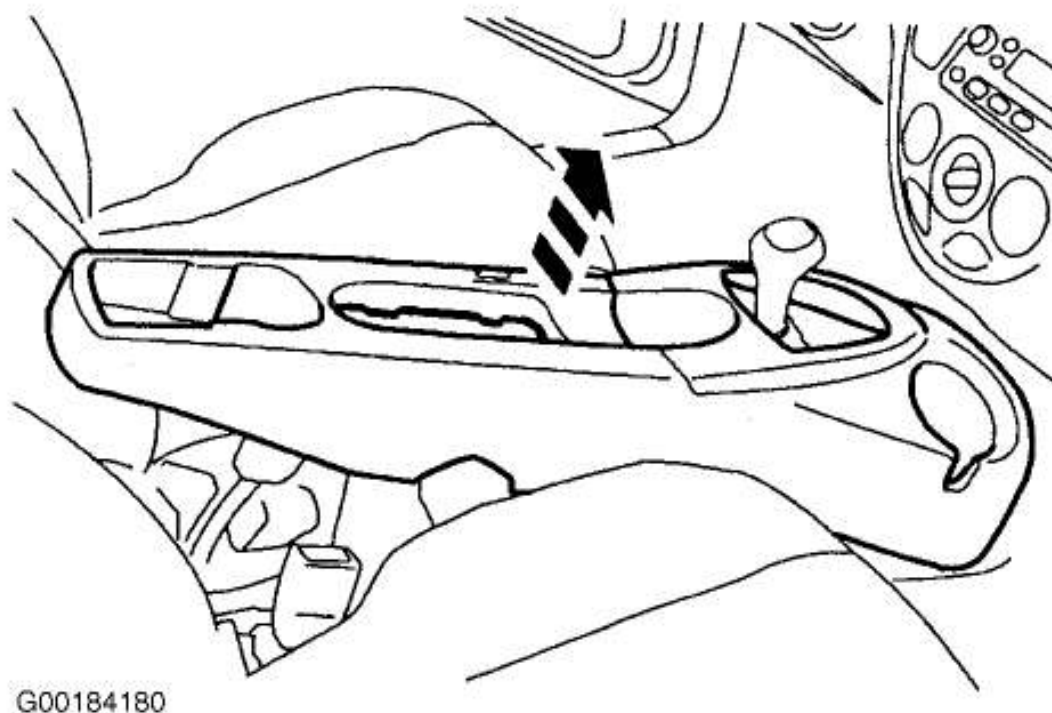


Fig. 37: Removing & Installing Floor Console (M/T)
Courtesy of FORD MOTOR CO.

HEATER CORE

Removal & Installation

1. Raise and support vehicle. Drain cooling system. Using special tool, disconnect coolant hoses from heater core. See **Fig. 38** . Lower vehicle. Remove floor console. See **FLOOR CONSOLE** .
2. Remove rear footwell vent air ducts. See **Fig. 39** . Remove footwell lower trim panel. See **Fig. 15** . Open glove compartment. Pull off hose and remove footwell vent air duct. See **Fig. 16** . Close glove compartment. Remove left-hand and right-hand retaining screws and remove footwell trim. See **Fig. 40** .
3. Disconnect electrical connector and remove accelerator pedal. See **Fig. 41** . Detach rear steel clip. See **Fig. 42** . Take care not to damage seat when detaching clip. Remove left-hand and right-hand in-vehicle crossbeam bracket. See **Fig. 43** . Remove heater core air duct housing. See **Fig. 44** .
4. Remove heater core housing. See **Fig. 45** . Remove heater core retaining bolt. See **Fig. 46** . Remove heater core. See **Fig. 47** .
5. To install, reverse removal procedure.

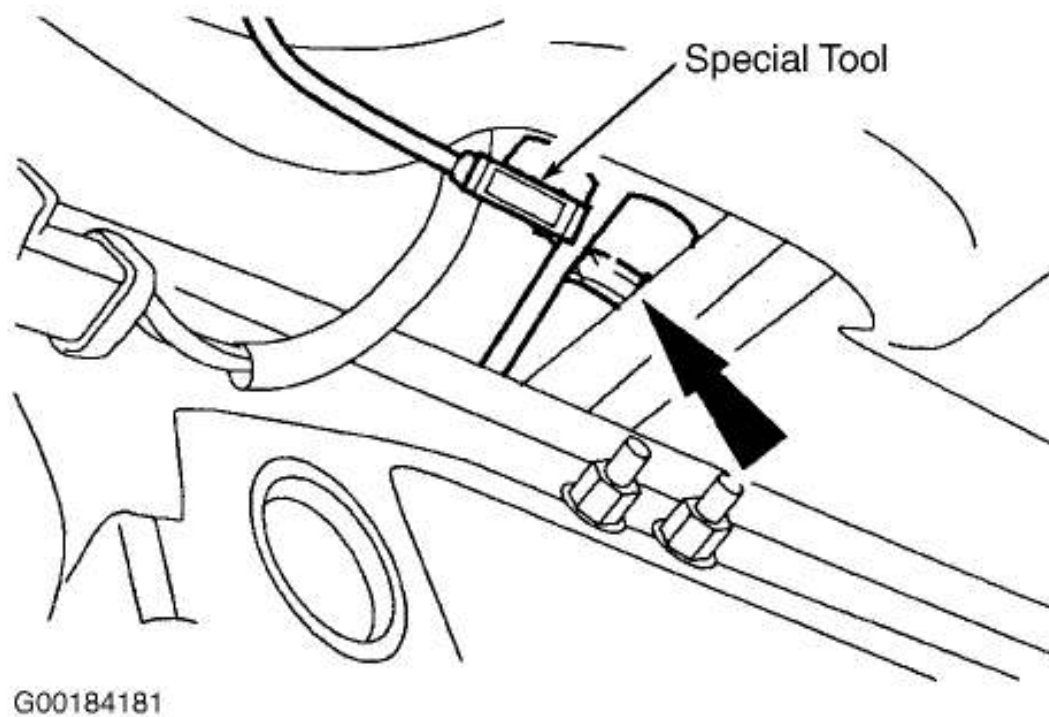


Fig. 38: Disconnecting Heater Core Hoses
Courtesy of FORD MOTOR CO.

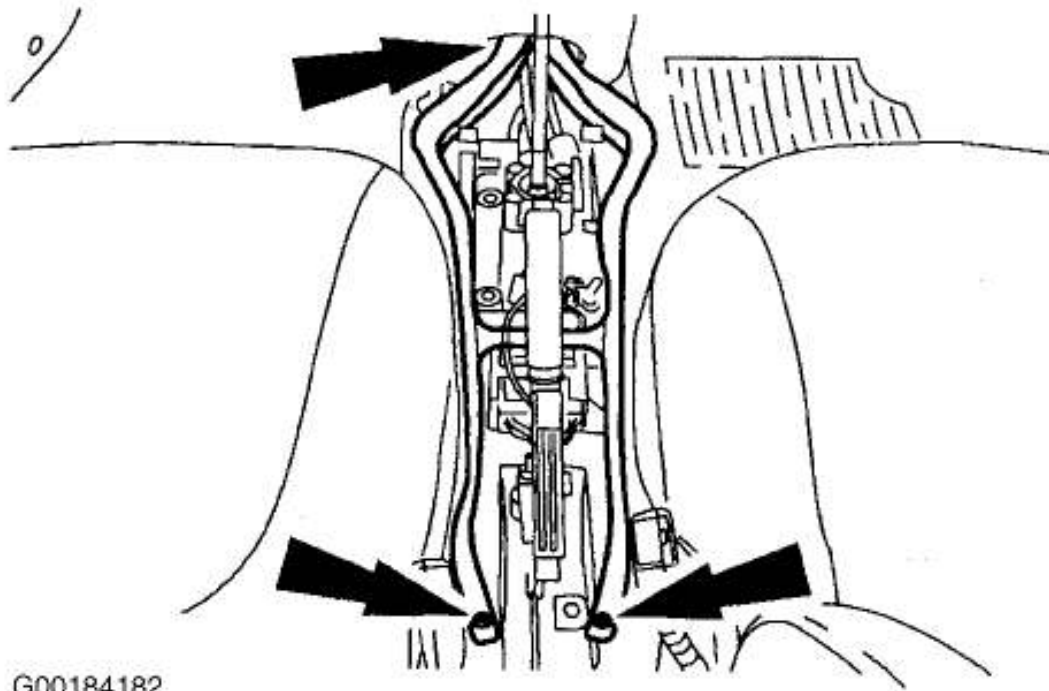


Fig. 39: Removing & Installing Rear Footwell Vent Air Ducts
Courtesy of FORD MOTOR CO.