

CONTROL UNITS

CONTROL UNITS LOCATION

Component	Location
Dashlight Brightness Control Unit	Behind brightness control knob.
Electric Load Detection Unit	In engine compartment fuse/relay block. See Fig. 4.
Igniter Unit	In distributor.
Integrated Control Unit	Behind dash fuse/relay block.
PGM-FI Electronic Control Unit	On passenger's side front floor, under carpet. See Fig. 2.
Power Door Lock Control Unit	Inside driver's door, above speaker.