



- A. Hose to Engine Vacuum
B. Vent Hose to Atmosphere
C. Wire to Front Axle Indicator Light
- | | |
|--------------------------|----------------------|
| 1. Vacuum Actuator | 6. Front Axle Switch |
| 2. Transfer Case | 7. Actuator Cable |
| 3. Vacuum Switch | 8. Vacuum Hose |
| 4. Front Propeller Shaft | 9. Connector Sleeve |
| 5. Front Axle | 10. Shift Fork |

50I06807