

WIRING INFORMATION 1997 Toyota Corolla

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE or BLACK	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	GREEN	At Dimmer Switch Or Harness In Driver Kick Panel
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	BLUE/RED or GREEN/WHITE	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	For door trigger wire, use BLACK in a connector at the top of the fuse box on vehicles without a factory sunroof. On vehicles with a factory sunroof use the RED/WHITE wire in a connector at the top of the fuse box.	
TRUNK TRIGGER (-)	RED/WHITE	At Light In Trunk
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	Connector At Fuse Box
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	RED/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1998 Toyota Corolla

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/WHITE	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
STARTER WIRE	RED	Ignition Harness
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
POWER DOOR LOCK (-)	BLUE/BLACK	Connector On Right Side Of Fuse Box
POWER DOOR UNLOCK (-)	GREEN/WHITE	Connector On Right Side Of Fuse Box
Test door lock wires by using the key in the passenger door.		
DOOR TRIGGER (-)	RED/WHITE	Harness At Rear Of Fuse Box
TRUNK TRIGGER (-)	RED/WHITE	At Light In Trunk
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER	YELLOW/GREEN or RED/BLUE	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	RED/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BLUE/RED	Harness In Driver's Kick From Driver Door